说明书/材质:128克哑粉纸/双面彩色印刷/风琴折/成品尺寸:128.5*182 mm

正面 折线位

折线位

User Manual

折线位



Food Waste Disposer



Welcome to your cleaner, greener home!

Welcome home your IUHAND - your new lean, green, food-recycling machine. This eco-smart technology transforms your leftovers and food scraps into a nutrient-rich soil amendment, reducing food waste and producing a garden-ready supplement, scientifically proven to nourish your garden! But you already know why you bought it. Now, let's learn how to use it!

- This guide will familiarise you with your IUHAND, introduce you to it's features and functions, while also showing you how to use and care
- To ensure that you are using your unit safely and effectively, be sure to read this guide throughly prior to operating your new unit.

HOW TO MAINTAIN

I. Cleaning the Unit's Exterior

- Wipe down the unit's exterior with a soft damp cloth. · Remove excess moisture with a soft dry lint-free cloth.
- With particularly stubborn grime, you can add a small amount of dish soap to the cloth.
- Do not immerse your unit in water or liquids. This will damage your
- unit and may cause electric shock. · Discard excess moisture collected in the drip tray.


II. Cleaning the Bucket

- · Remove the bucket from the unit.
- Remove all blockages & loose particles from the bucket.
- Wash the bucket thoroughly with warm water, a small amount of dish soap and wipe it with a dish cloth after.
- Allow the bucket to completely air dry before placing it back in

III. Activated Carbon Filter

- Replace every months.
- Effectiveness varies depending on frequency of use and types of organic materials being processed.
- · Do not vacuum or wash the activated carbon filter.


Items you can and cannot put in this machine

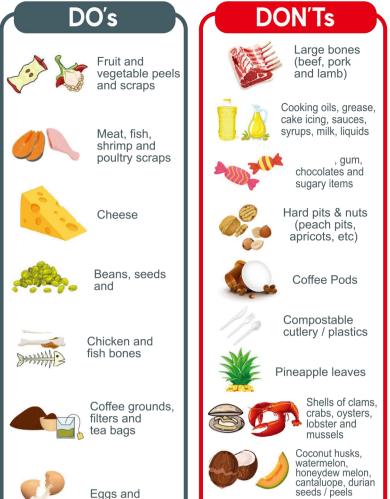

Eggs and Ice cream

折线位


we recommend you to do the following:

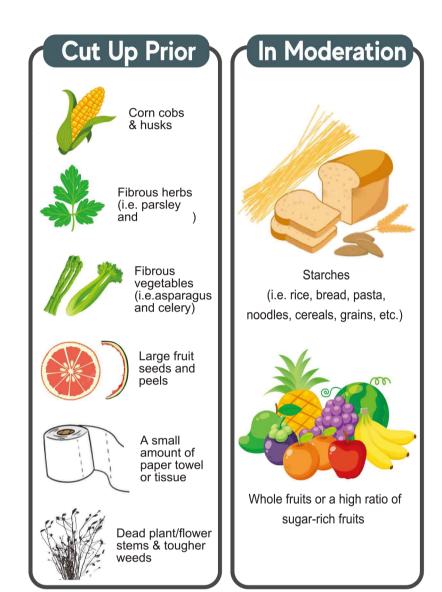

LET US REDUCE, REUSE AND RECYCLE

- Upgraded special modified activated carbon filter for better filtration of waste odours.
- By removing the base (with activated carbon filter) and placing it on a balcony ,outside garden, the food waste disposer becomes a composter ,once machine with two uses while reducing the cost of the activated carbon filter.
- Automatically turns food waste into a dry nutrient-rich soil additive in just a few hours.


EASY PROCESS FOR COMPOSTING FOOD WASTE

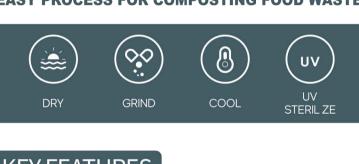


KEY FEATURES

- SMART SELF CLEANING
- Add some water, press a button and let the machine do all the hard work.
- SMART ONE TOUCH SYSTEM From food waste to compost in just one touch of a button. Now thats smart.
- UV-C is a chemical-free sanitizing method, which kills allergens, viruses,
- **SMART VOICE NOTIFICATION**
- Share details about your shipping policies, item returns, or customer service.


HOW TO USE

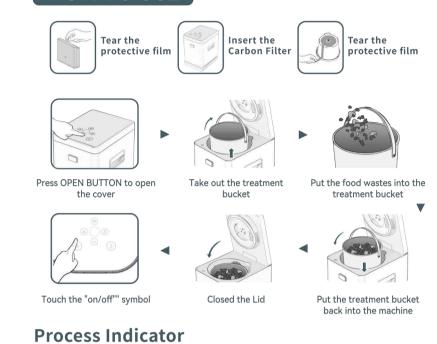

To explain the meaning of each light indicated

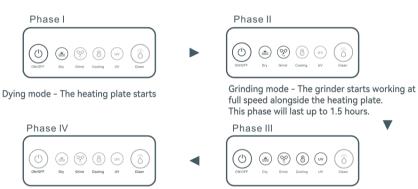

Sterilise mode - The UV-C light begins to Cooling mode - The drying and grinding mode has now finished and the treatment empty the treatment bucket for the next use. begins to cool.

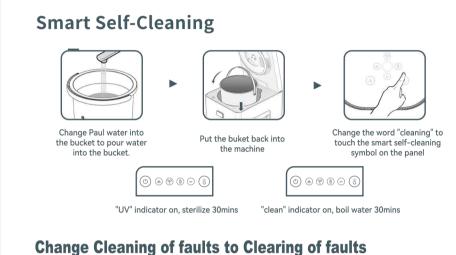

If the machine's indicators start flashing and buzzing please do the following:

All Clear Operation

Hold the "on/off" and "cleaning" symbols on the touch panel for 10 seconds to clear the error.

If you open the lid during use, the device will enter a safety mode and you will be unable to restart the device until the machine has cooled.

and yogurt

FOR STORAGE

1. After composting or cleaning, unit will automatically proceed to "STORAGE" mode. While in Storage Mode, the unit's fan is still

3. The "UV" button will be blinking when unit is in Storage Mode.

running and the UV lamp is still turned on. 2. Stir the compost intermittently to prevent it from rotting.

折线位

折线位

折线位

Note:

- Do not attempt to compost anything other than food waste in the unit such as glass, metal, fabrics or wood. Likewise, do not cycle large bones such as pork or beef bones, pits, sweets, gum, nuts or hard shells as these materials may cause serious damage to the treatment bucket, and/or cause a motor overload. Do not add oil, pesticides ,chemicals ,flammable materials or compounds ,or water into the unit.
- We do not recommend leaving unprocessed food waste in the unit for long periods of time. Leaving decomposing organic matter in the enclosed unit will generate odors, methane gas, and might attract fruit flies or other pests.

FUNCTIONAL DISPLAY

- **UV STERILIZE** UV Eliminates harmful food pathogens.
- Once the food waste has been reduced in size, this process further breaks down the food waste into small, powder-like particles which can be easily mixed in with soil to release nutrients upon immediate application of the by-product.
- Dehydrates and reduces food waste volume by up to 90% of its original
- This process returns the unit and contents to room temperature, for safe handling. This also continues the aeration and dehumidifying processes.
- volume, removes foul odors and reduces methane production.

 - Helps get rid of remaining particles that are stuck in the bucket. It emits heat to dry up excess oils and uses UV to eliminate harmful pathogens.

TROUBLESHOOTING GUIDE

Concern	Possible Causes	Solution
"Dry" and "Grind" indicator lights are flashing at the same time accompanied by a warning sound	Waste is stuck in the treatment bucket	Take out the waste stuck in the bin Hold and press the "Power" and "Clean" buttons at the same time for at least five (5) seconds Two-second beeping sound will be heard and unit will be reset Unit will return to Standby mode
	Blade for grinding is stuck	
"Grind" and "Cool" indicator lights are flashing at the same time accompanied by a warning sound	Overheating Temperature in the bin is too high.	 When temperature in the bin is higher than 45°C, unit will stop working Wait for the unit to cool down Hold and press the "Power" and "Clean" button at the same time for at least five(5) seconds to reset.

Note:

Do not open the lid or disconnect the power if the unit is running. If the operation is interrupted, the unit will not save the progress.

For any other concerns, please contact us directly. Do not attempt to disassemble or repair the unit on your own as this may void warranty.

IMPORTANT SAFETY GUIDELINES

- Carefully read all instruction materials accompanying the product.
- To avoid electrical shocks, keep cords, plugs and portable electrical appliances away from water and other liquids.
- Unplug the unit from the outlet when not in use, prior to servicing and adding/removing parts, and before cleaning the unit.
- Avoid touching moving parts. • Do not operate any appliance with a damaged cord or plug, a unit
- showing signs of malfunction, or any product that has been dropped or damaged in any way.
- The use of attachments that is not recommended or sold by the
- manufacturer may cause fire, electric shock, or injury. • Do not let electrical cord hang from counter or table edge.
- Unit must only be plugged into properly grounded outlets
- Turn off and unplug the unit prior to opening the lid. • Do not touch any hot surfaces.
- Use the handles or knobs provided for safe handling. • Do not place the unit on or near a hot gas or electric burner.
- Keep unit away from direct sunlight. • Place the unit on a flat, even and dry surface.
- Do not use appliance for any purpose other than its intended use. • Keep the appliance and power cords out of reach of children.

Important Reminders

- Do not add food waste directly into the machine without the bin installed in the unit.
- Do not open the unit during a cycle. Do not put your hands inside the unit unless it has completely finished cycling and has gone through all the cycle modes.
- Do not keep opening the machine during the cycle process. Every time
- you open the machine, the process will resume back to first stage • Refer to the user manual for what can and cannot be put in the bin.

IUHAND TAKES CARE OF YOUR FOOD WASTE SO YOU DON'T HAVE TO

When we surveyed 2,101 U.S. adults in August 2020, the main reasons people gave for not wanting to recycle their food waste were:

Leads to pests It's unhygienic Badodours 35% 30% 24% It's messy Too much hassle



EASY STEPS TO REDUCE **FOOD WASTE**

OUR TOP TIPS

Serve smart

reducing plate waste.

Plan ahead Before you go to the grocery store or order online, make a list so you don't buy more than you need.

Love your leftovers Pack leftovers in small portions in shallow containers,

Portion control is good for your waistline, and good for

mark the contents and date, refrigerate and use within 3

Compost, don't trash Food scraps can be recycled into compost, an organic material that can be added to soil to help plants grow.

to 4 days or freeze immediately.

SOCIAL VALUES

It's our responsibility to protect the environment

Up to 40% of carbon emissions from waste are created during transport. Our disposer eliminates all emissions from transport and leaves you with a nutrient-rich EcoGold for your house plants and garden.




Let's create a cleaner community

Food waste in your bin creates odours and attracts pests. It also means collection has to be more frequent. Eliminate the bin day smell and have fewer refuse trucks driving around the community.It's our responsibility to protect the environment.Up to 40% of carbon emissions from waste are created during transport. The fully automatic food waste composting machine eliminates all emissions from transport and

leaves you with a nutrient-rich EcoGold for your

house plants and garden.



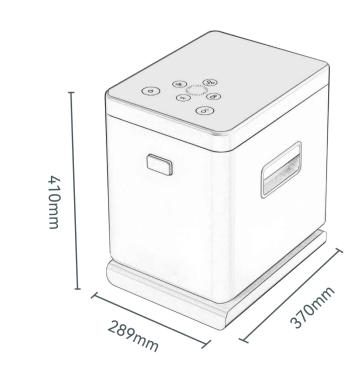

TECHNICAL SPECIFICATIONS

Model Name	Food Waste Disposer	
Model Number		
Processing Modes	Dry, Grind, Cool, UV Sterilize, Cleαn	
Result	90% Food waste will be decomposed, 10% left will be converted into organic soil additive	
Bin Capacity	3 Liters	
Rated Voltage	110V / 220V	
Product Dimensions	L-370mm x W-289mm x H-410mm	
Product Weight	10kg	
	•	